INSTRUCTION BOOK

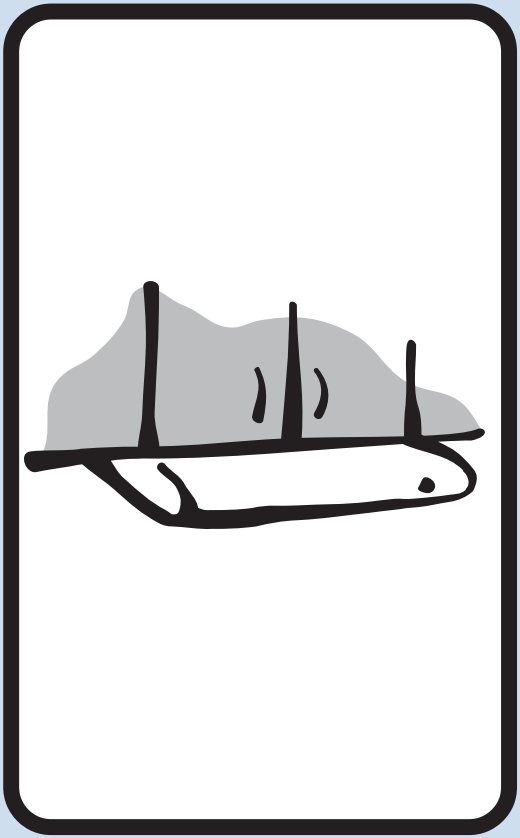

INSTRUCTION FOR USE

Electrolux

WARNING

- Please ensure that the following installation heights between the lowest part of the hood and the hob are adhered to:
  65cm above gas hobs
  55cm above electric hobs
  If the instructions for the installation of the hob specify a greater distance, then this should be taken into account.
- *The exhaust air must not be fed into any duct used for electricity (central heating systems, thermosiphons, water-heaters, etc.).*
- *Comply with the official instructions provided by the appropriate authorities in merit when installing the cooker hood. In addition, exhaust air should not be discharged into a wall cavity, unless the cavity is designed for that purpose.*
- *The room must be well ventilated in case a hood and some other heat equipment fed with an energy other than electricity (gas, oil, coal heaters, etc) operate at the same time. In fact the hood, disposing of air, could create a vacuum in the room. The vacuum should not exceed 0,04mbar. This prevents the gas exhausted by the heat source from being intaken again. It is therefore advisable to ensure the room contains air taps able to ensure a steady flow of fresh air.*
- ***Check the rating plate inside the appliance; if the symbol ⧈ (double insulated) is printed, read the following: this appliance has such technical particulars that it belongs to class II insulation, therefore it must not be earthed.***
  The following warning is valid in the United Kingdom only: in case your cable is not fitted with with a plug, read the following instructions; as the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
  – the wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black;
  – the wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
- ***Check the rating plate inside the appliance; if the symbol ⧈ (double insulated) is NOT printed read the following: ATTENTION: This appliance must be earthed.*** *When making the electrical connections, check that the mains socket has an earth connection.*
  The following warning is valid in the United Kingdom only: as the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
  – the wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol [⏚], or coloured green or green and yellow;
  – the wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black;
  – the wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
- *When making the electrical connections, check that the voltage values correspond to those indicated on the data plate inside the appliance itself. In case your appliance is not fitted with a flexible cable and has no plug, or has not got any other device ensuring double pole isolation from the electricity supply, with a contact opening distance of at least 3 mm, such separating device ensuring disconnection from the main must be included in the fixed installation. If your unit features a power lead and plug, position this so the plug is accessible at all times.*
- *Always switch off the electricity supply before carrying out any cleaning or servicing operations on the appliance.*

USE

- *Never do flambé cooking beneath the hood.*
- *When frying, take particular care to prevent oil and grease from catching fire. Previously used oil is especially dangerous in this respect. Do not use uncovered electric hotplates.*
- *To avoid possible risks of fire always comply with the indicated instructions when cleaning anti-grease grille and when removing grease deposits from the appliance.*

MAINTENANCE

- *Regular and thorough cleaning ensures correct and long-lasting operation.*
- *Particular care must be paid to the grease grille which must be periodically cleaned in relation to use (at least once every two months).*

Remove the grease grille and wash them either by hand or in the dishwasher using neutral detergent.

- *Any fat deposits should be removed from the appliance periodically depending on amount of use (at least every 2 months). Avoid using abrasive or corrosive products. To clean painted appliances on the outside, use a cloth dipped in lukewarm water and washing up liquid. To clean steel, copper or brass appliances on the outside, it is always best to use specific products, following the instructions on the products themselves. To clean the inside of the appliance, use a cloth (or brush) dipped in denatured ethyl alcohol.*

DESCRIPTION

The appliance can be used in both the filtering and ducting version.
In the **Filtering** version (Fig. 1), the air and vapours conveyed by the appliance are depurated by charcoal filter(s) and recirculated around the room. ATTENTION: Using the hood as a filtering one it is necessary to use the charcoal filter(s) that purifies the air sent back into the room.
In the **Ducting** version (Fig. 2), cooking vapour and odours are exhausted straight outside by a disposal duct which passes through the wall/ceiling. Use of charcoal filter is therefore unnecessary.
According to the model you have bought, the appliance can include 1 or 2 motors. In the 1 motor version the flange for the air to be exhausted has not got a central position, but it is slightly on the left.

INSTALLATION

Before assembling, in order to move the appliance more easily, take off the **grease grille** (Fig. 3): pull the front of the grille upwards; remove the back from its seat.
IMPORTANT: So as not to damage your product, during installation ONLY USE THE SCREWS PROVIDED. Make sure these are used as shown in the following instructions. To compensate for any uneveness between the appliance and the wall, a plastic SPACING BAR must be fixed at the back of the appliance by means of the three screws A is included (Fig.4). The 3 screws A to be used are contained in the accessory bag attached to the plastic spacing bar. Cut the spacing bar according to the distance to be adjusted.

Assembly under a wall cupboard
The following operations are essential for assembly:
– Install the wiring system
– Prepare the air venting outlet if your appliance is to be installed in the Ducting version.

Installation as indicated in Fig. 5:
Using the template make the 4 necessary fixing holes in the bottom of the cupboard and cut the air vent hole.
Move the hood close to the bottom of the wall unit and then connect the two units by means of the 4 self-tapping screws supplied together with the appliance.
Installation with brackets as in Fig. 6 (optional):
Take the two brackets (S) out of the accessory bag together with the 8 screws provided. Fit the brackets to the wall unit being careful to position these correctly; for this operation use the 4 longer screws. At this point, secure the appliance to the brackets using the 4 shorter screws.
Ducting version: fit the flange of the hood with the air vent hole made previously in the wall/ceiling by means of an suitable tube. Connect the mains cable to the electricity supply. Assemble the grease grille with the hood, inserting it with the front edge upwards.
Filtering version: fit a suitable hose to the flange of the hood so that the air is recirculated back into the room. Connect the mains cable to the electricity supply. Fit the charcoal filter inside the grease grille securing it by means of the 2 metal wires supplied (F), as indicated in Fig. 3. Assemble the grease grille with the hood, inserting it with the front edge upwards.

OPERATION

Controls (Fig. 7):

A = ON/OFF 1st speed switch
B = II speed switch
C = III speed switch
The motor is automatically switched ON or OFF by opening/closing the visor (unless switch A is in position 0). Upon opening the visor the previously selected speed is used.
D = Light switch. Position A (automatic), the light is automatically switched ON or OFF by the opening/closing of the visor. Position M (manual), the light is on. Position 0, the light is off.

If the hood is used in the **filtering version**

(recirculation), it is necessary to change the charcoal filter(s) according to use about every six month. To remove the filter A (Fig. 3):

– open the visor pulling it first downwards, then towards the front.
– take off the grease grille: pull the front of the grille upwards; remove the back from its seat.
– take off the charcoal filter from the inside of the grease grille taking off the 2 metal wires F (Fig.3) that blocks it.

Light bulb

- If the **fluorescent lamp** or **incandescent lamps** need changing, slacken the lamp cover by disconnecting the screw and remove the lamp (Fig. 8). Replace with a lamp of the same type.
- To change the **rectangular halogen lamps** open the cover and remove the lamp without touching it with bare hands (Fig. 9). Replace with a lamp of the same type.

SERVICE & CUSTOMER CARE

Before calling out an engineer, ensure that the hood has been correctly installed, that it is connected to the mains supply, that the filter(s) have been replaced if necessary.
If you require an engineer or wish to purchase apare parts contact your local Service Force Centre by telephoning:

08705 929929

Your call will be routed to the service centre covering your area. For the address of your local centre and further information about Servce Force, please visit the website at www.electrolux.co.uk

Customer Care Departement
Electrolux
55-77 High Street
Slough, SL1 1DZ

Tel: 08705 950950 - calls to this number may be recorded for training purposes.

1

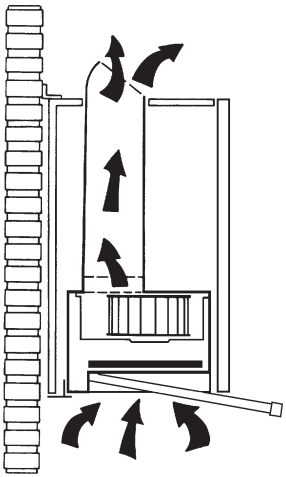

2

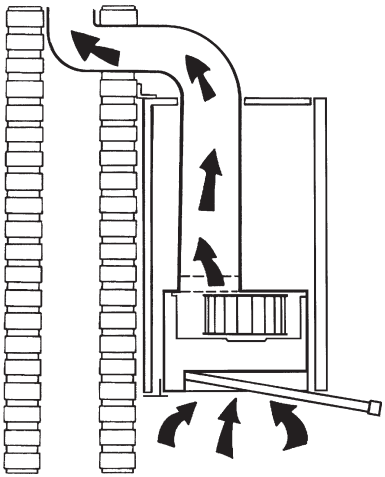

3

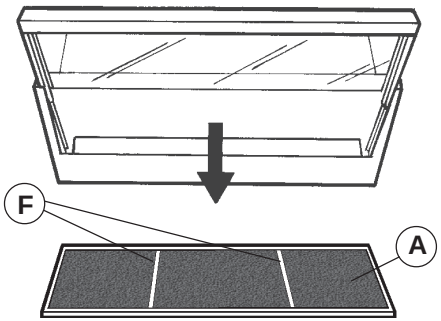

4

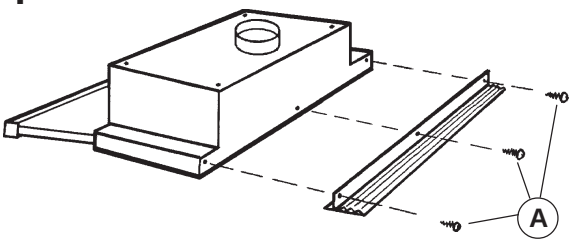

5

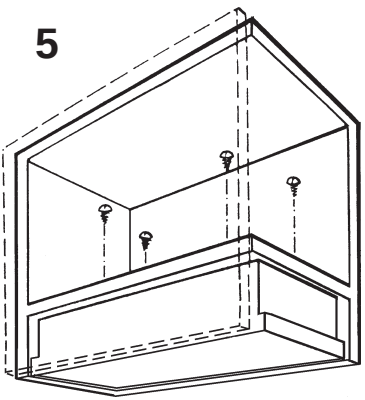

6

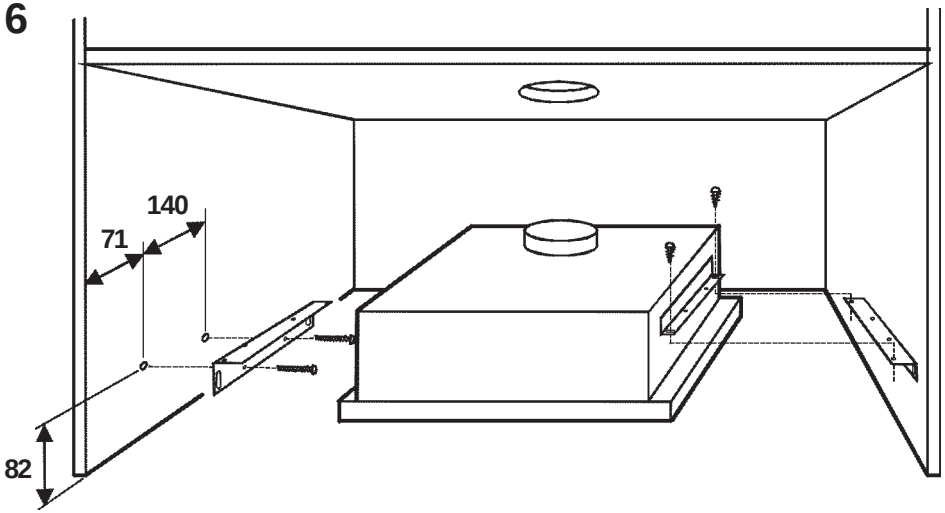

7

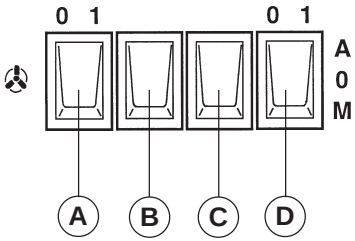

8

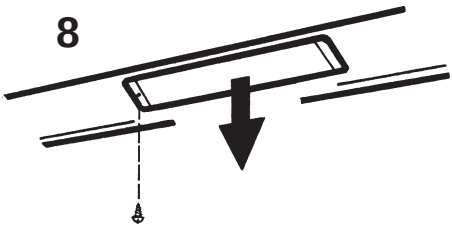

9

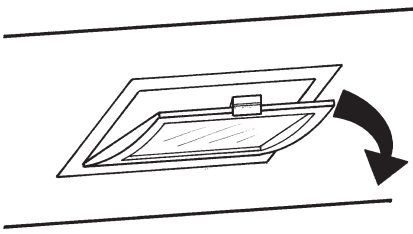

© **Electrolux 2003**
Subject to change without notice

The Electrolux Group. *The world's No. 1 choice.*

The Electrolux Group is the world's largest producter of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

04307033/1 - 415cl. 1/2 Electrolux UK

This file has been downloaded from:

www.UsersManualGuide.com

User Manual and User Guide for many equipments like mobile phones, photo cameras, monther board, monitors, software, tv, dvd, and othes..

Manual users, user manuals, user guide manual, owners manual, instruction manual, manual owner, manual owner's, manual guide, manual operation, operating manual, user's manual, operating instructions, manual operators, manual operator, manual product, documentation manual, user maintenance, brochure, user reference, pdf manual